


REMOTE CONTROLLER

Remote controller outside

 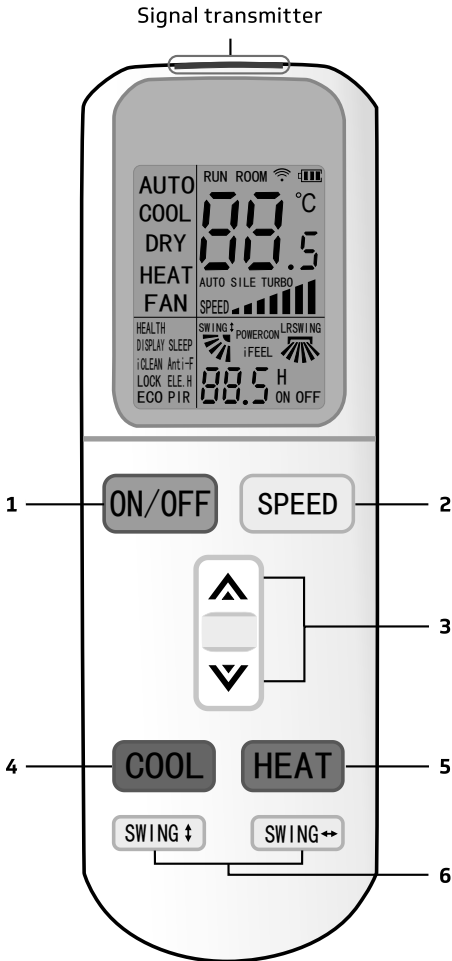


1 ON/OFF button

Press this button, the unit will be started or stopped, which can clear the timer or sleeping function of last time.

2 SPEED button

Press this button, speed will change as below:



3 ▲ ▼ button

When press ▲ button, the setting temperature will be increased by 0.5°C. When press ▼ button, the setting temperature will be decreased by 0.5°C. The temperature will be changed quickly by pressing the button continuously and setting temperature range is 16°C to 32°C.

4 COOL button

Press the COOL button, the mode of operation is shifted into cooling.

5 HEAT button

Press the HEAT button, the mode of operation is shifted into heating.

6 SWING button


Press this button to open up/down (left/right) swing function, press it again, fix louver position.

Up/down (left/right) setting is only valid in this mode, it will not affect louver in other modes.

Up/down (left/right) swing has memory function, it can keep primary setting when turn off then turn on or switch from other modes to primary mode.

REMOTE CONTROLLER

Remote controller inside

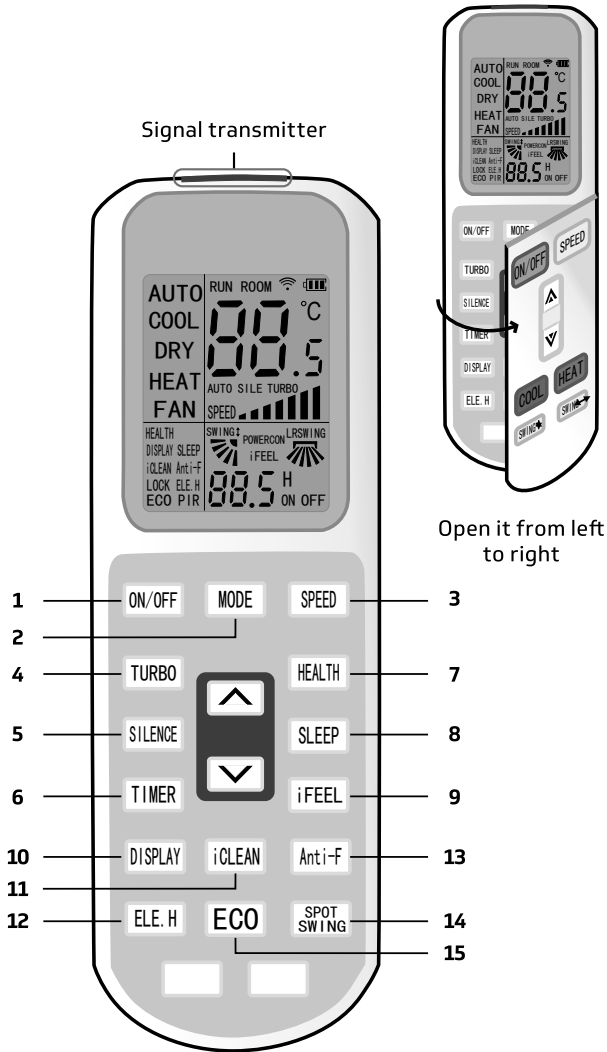

Note: Remote controller outside buttons only valid when surface cover is closed.

The picture is general remote controller, contains almost all of the function buttons. They may be slightly different from material object (depend on model).

REMOTE CONTROLLER

1 ON/OFF button

Press this button, the unit will be started or stopped, which can clear the timer or sleeping function of last time.

 
2 MODE button

Press this button, the running mode will change as below:



3 SPEED button

Press this button, speed will change as below:



4 TURBO button

Set turbo on or off (the characters of turbo will appear or disappear) by pressing this key under cooling or heating mode.

Once energized, the unit will be defaulted to be turbo off.

This function can not be set under auto, dry or fan mode, and characters of turbo won't appear.

5 SILENCE button

Set silence on or off (the characters of silence will appear or disappear) by pressing this key.

Once energized, the unit will be defaulted to be silence off.

6 TIMER button

On the status of the unit on, press this button to set timer off. On the status of the unit off, press this button to set timer on.

Press this key once, words H on(off) will appear and flicker. In which case, press ▲ or ▼ button to change timing value quickly, the setting time range is from 0.5 to 24 hr.; press this key once again to fix the time, then remote controller will send out the signal immediately and H on/off will stop flickering.

If the time of that no press timer button under flickering status is above 10s, the timer setting will quit.

If the timer has been set, press this button once again to quit it.

7 HEALTH button

Press this button, you can turn on or off the health function.

8 SLEEP button

Press the SLEEP button, the sleeping indicator light of indoor unit flashes on.

The air-conditioner runs in sleeping mode for 10 hours and quit sleep mode, recover back to former mode.

The unit will turn off automatically if the timing mode are running out of time.

9 iFEEL button

Press this button can be used to set the feeling function. The LCD shows the actual room temperature when the function set and it shows the setting temperature when the function cancelled.

This function is invalid when the appliance at the Fan mode.

10 DISPLAY button

In display mode, press button once, shut off display, press it again, LCD will show ambient & setting temperature after flashing 5s. It's convenient for users who are not adapt to noctlucence and it's also convenient for checking ambient&setting temperature anytime.

11 iCLEAN button

When remote controller is at the off state, press "iCLEAN" button, the unit runs "iCLEAN" function.

The purpose of this function is to clean dust on evaporator and dry the inside water of evaporator and to prevent the evaporator going moldy due to water deposition and boasting strange smell.

REMOTE CONTROLLER

After setting “iCLEAN” function, press “iCLEAN” button or “ON/OFF” button to quit it.

The clean function will be stop working after about 30 minutes running working without any operation.

12 ELE.H button

In heating mode, press this button, the mode of operation is shifted into supplementary electric heating.

13 Anti-FUNGUS button

The purpose of this function is to dry the inside of the evaporator and to prevent the evaporator from going mouldy due to water deposition and thus dispersing strange smell.

This function is controlled by the remote controller under cooling, dry and auto (cooling and dry) modes, the horizontal wind guiding bars are at the initial position for cooling. The A/C runs under heating mode(the cooling only A/C only runs under fan mode), the internal fan runs for 3 minutes with weak wind before stop.

This function has not been set in the factory. You may freely set and cancel this function. The setting method is: under “off” status of the A/C and the remote controller, point the remote controller toward the A/C and continuously press “Anti-FUNGUS” button for one time, the buzzer keep beeping five times again after five times beep, indicating that this function is ready. In case this function has been set, unless the whole A/C is powered off or the function is manually cancelled, the A/C then has this function as default.

To cancel the function:

1. Under “off” status of the A/C and the remote controller, point the remote controller toward the A/C and continuously press “Anti-FUNGUS” button for one time, the buzzer keep beeping three times again after five times beep, indi-

cating that this function has been cancelled.

2. Power off the whole A/C.

When this function is on, it is suggested not to restart the A/C before it is completely stop. This function will not run in case of time stop.

14 SPOT SWING button

Press this button, the horizontal wind direction vanes can swing automatically, when you have the desired vertical wind direction.

Press it again, the horizontal wind direction vanes will be stopped at the situation of your choice.

15 ECO button

In cooling mode, press this button, the unit will runs “ECO” economic operation mode which costs the least power consumption. After running for 8h, it will automatically exit, otherwise, press this button once again to quit it.

Note: The unit will turn off automatically if the timing mode are running out of time.



USAGE

Note! Aim the remote controller towards the receiver on the airconditioner. Beep sound can be heard when a button is pushed. When the sound of transmitting signal can't be heard, the transmission was failed.

Automatic operation mode

1. Press the **ON/OFF** button, the air-conditioner starts to operate.
2. Press the **MODE** button, select the automatic operation mode.
3. Press the **SPEED** button, you can select fan speed. You can select fan speed from LOW, MID, HIGH, AUTO.
4. Press the button again, the air-conditioner stops.

Cooling/Heating operation mode (cold wind type has no heating function)

1. Press the **ON/OFF** button, the air-conditioner starts to operate.
2. Press the **MODE** button, select the Cooling or Heating operation mode.
3. Press the  or  button, set the temperature, temperature can be set at 1°C difference range from 16-32°C.
4. Press the **SPEED** button, you can select fan speed. You can select fan speed from LOW, MID, HIGH, AUTO.
5. Press the **ON/OFF** button again, the air-conditioner stops.



Fan operation mode

1. Press the **ON/OFF** button, the air-conditioner starts to operate.
2. Press the **MODE** button, select the Cooling or Heating operation mode.
3. Press the **SPEED** button, you can select fan speed. You can select fan speed from LOW, MID, HIGH.
4. Press the button again, the air-conditioner stops.

Remark: In the circulation operation mode, to set the temperature is noneffective.

USAGE

Drying operation mode

1. Press the **ON/OFF** button, the air-conditioner starts to operate.
2. Press the **MODE** button, select the Dry operation mode.
3. Press the  or  button, set the temperature, temperature can be set at 1°C difference range from 16-32°C.
4. Press the **SPEED** button, you can select fan speed. You can select fan speed from LOW, MID, HIGH, AUTO.
5. Press the **ON/OFF** button again, the air-conditioner stops.

Note: This manual introduces function for all of the remote control, maybe you press one button without any reaction, well, the air-conditioner you bought hasn't this function.

Filter Dirty Alarm

When the AC runs 360 hours in total, it will remind customer to clean filters. To set this function on, customer needs to press HEALTH button 5 times in 3 sec, then customer would hear 6 buzzers, which means the function is on. To set the function off, press HEALTH button 5 times in 3 sec, then you would hear 3 buzzers.